



DD-01 Manual

Normal displayed interface 1

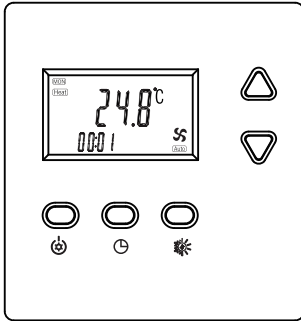


- ⏻ : Long press to enter setting mode.
Short press shutdown.
- 🕒 : Long press to enter time setting.
- 🌀 : Long press and to switch the heating and cooling mode.
Short press to switch air volume.
- ▲ : Long press to enter holiday mode, press any key to exit.
Short press to adjust the setting temperature.
- ▼ : Long press to switch Fahrenheit and Celsius.
Short press to adjust the setting temperature.

Setting interface 1

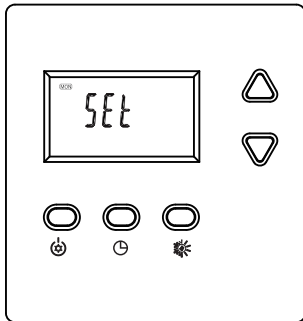

First select the required day to set or copy.
Then select SET or COPY to enter setting interface (🕒) or copy interface.


- ⏻ : Long press to exit setting mode.
Short press to switch the blinking cursor position, and enter next step.
- 🕒 : Long press to continuously adjust / shift left.
Short press to adjust / shift left.
- 🌀 : Long press to continuously adjust / shift right.
Short press to adjust / shift right.
- ▲ : Long press to continuously adjust / decrease parameters.
Short press to adjust / decrease parameters.
- ▼ : Long press to continuously adjust / increase parameters.
Short press to adjust / increase parameters.

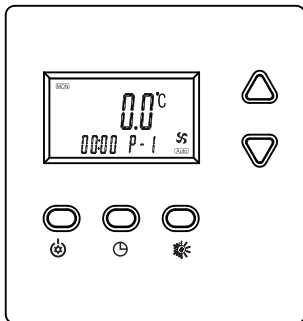

P-1 represents the first set of data, five sets of data per day
Time and temperature can be set separately for each group of data. Data can be saved after setting.

- ⏻ : Long press to exit setting mode.
Short press to switch the blinking cursor position, and enter next step.
- 🕒 : Long press to continuously adjust / shift left.
Short press to adjust / shift left.
- 🌀 : Long press to continuously adjust / shift right.
Short press to adjust / shift right.
- ▲ : Long press to continuously adjust / decrease parameters.
Short press to adjust / decrease parameters.
- ▼ : Long press to continuously adjust / increase parameters.
Short press to adjust / increase parameters.

Home interface

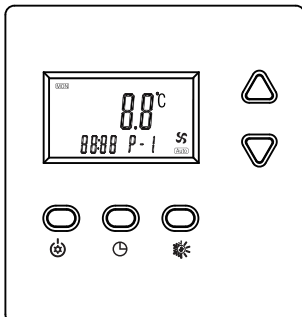


Long press SET to enter the setting selection interface.

- 1: The day of the week is flashing. Press the left and right (🕒, 🌀) buttons to select the day of the week.
Short press SET (⏻) button to enter the next step.



- 2: SET flashing, short press left or right (🕒, 🌀) button to select SET or COPY.
Short press the SET (⏻) button while SET is flashing, enter the setting interface.
Short press the SET (⏻) button while COPY is flashing, enter the copy interface.

Copy interface

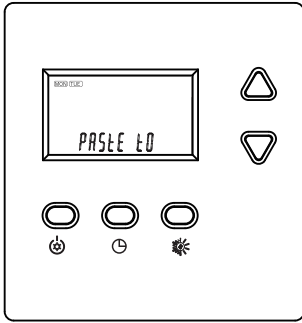


Show paste source and paste destination (flashing).
 Select the target date for pasting, adjust by (←, →, ↑, ↓) keys, press key (⏻) to enter the next step.



The screen displays SURE PASTE TO or SURE UNSAVE, and can be adjusted by (←, →, ↑, ↓) keys.

- ⏻ : Long press to exit setting mode.
 Short press to switch the blinking cursor position, and enter next step.
- ← : Long press to continuously adjust / shift left.
 Short press to adjust / shift left.
- : Long press to continuously adjust / shift right.
 Short press to adjust / shift right.
- ↑ : Long press to continuously adjust / decrease parameters.
 Short press to adjust / decrease parameters.
- ↓ : Long press to continuously adjust / increase parameters.
 Short press to adjust / increase parameters.

Time setting interface

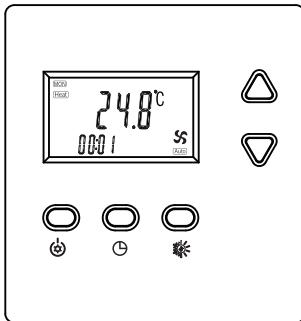

The cursor changes at the three positions of hour, minute and day of the week.

- ⏻ : Long press to exit setting mode.
 Short press to switch the blinking cursor position, and enter next step.
- ← : Long press to continuously adjust / shift left.
 Short press to adjust / shift left.
- : Long press to continuously adjust / shift right.
 Short press to adjust / shift right.
- ↑ : Long press to continuously adjust / decrease parameters.
 Short press to adjust / decrease parameters.
- ↓ : Long press to continuously adjust / increase parameters.
 Short press to adjust / increase parameters.

Wiring diagram

